WESLO®
pursuit R 3.2

www.weslo.com

Model No. WLEX81512.0
Serial No. _____

Write the serial number in the space above for reference.

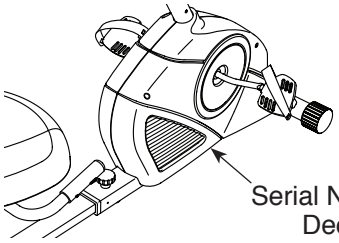

QUESTIONS?

If you have questions, or if parts are damaged or missing, **DO NOT CONTACT THE STORE; please contact Customer Care.**

IMPORTANT: Please register this product (see the limited warranty on the back cover of this manual) before contacting Customer Care.

CALL TOLL-FREE:
1-866-699-3756
Mon.–Fri. 6 a.m.–6 p.m. MT
Sat. 8 a.m.–12 p.m. MT

ON THE WEB:
www.wesloservice.com

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.

USER'S MANUAL

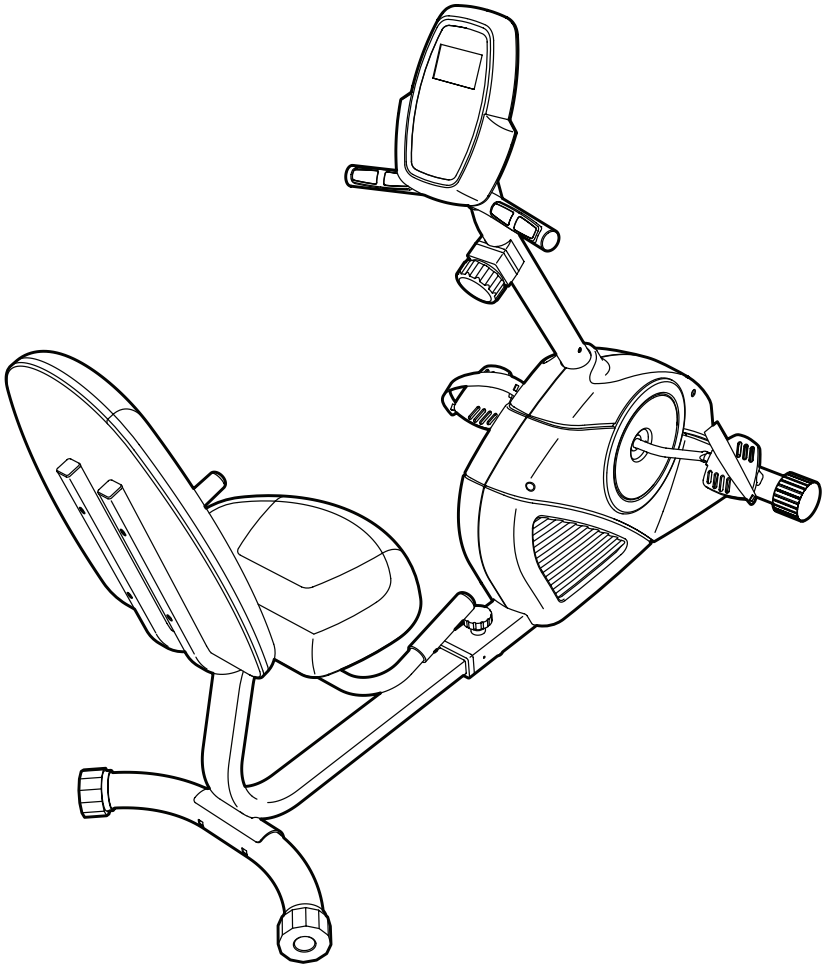

FREE
iFIT® HOW-TO VIDEOS
www.iFit.com

TABLE OF CONTENTS

WARNING DECAL PLACEMENT 2
IMPORTANT PRECAUTIONS 3
BEFORE YOU BEGIN 4
PART IDENTIFICATION CHART 5
ASSEMBLY 6
HOW TO USE THE EXERCISE BIKE 13
MAINTENANCE AND TROUBLESHOOTING 18
FCC INFORMATION 20
EXERCISE GUIDELINES 21
PART LIST 22
EXPLODED DRAWING 23
ORDERING REPLACEMENT PARTS . . . . . Back Cover
LIMITED WARRANTY . . . . . Back Cover

WARNING DECAL PLACEMENT

This drawing shows the location(s) of the warning decal(s). **If a decal is missing or illegible, see the front cover of this manual and request a free replacement decal. Apply the decal in the location shown.** Note: The decal(s) may not be shown at actual size.

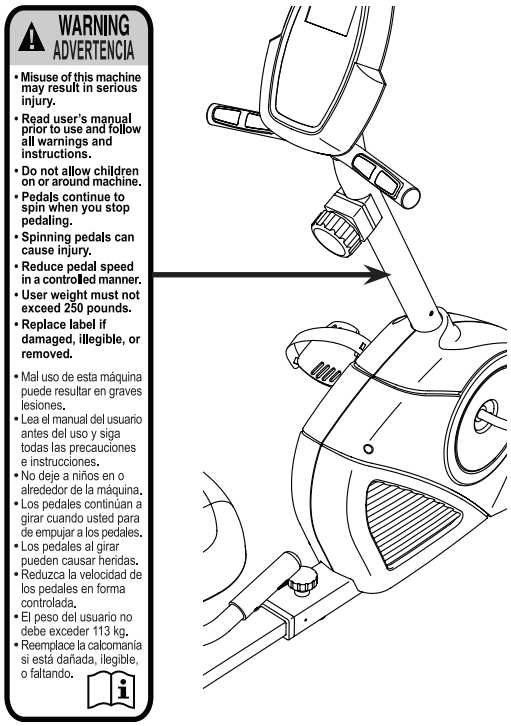
WARNING
ADVERTENCIA
• Misuse of this machine may result in serious injury.
• Read user's manual prior to use and follow all warnings and instructions.
• Do not allow children on or around machine.
• Pedals continue to spin when you stop pedaling.
• Spinning pedals can cause injury.
• Reduce pedal speed in a controlled manner.
• User weight must not exceed 250 pounds.
• Replace label if damaged, illegible, or removed.
• Mal uso de esta máquina puede resultar en graves lesiones.
• Lea el manual del usuario antes del uso y siga todas las precauciones e instrucciones.
• No deje a niños en o alrededor de la máquina.
• Los pedales continúan a girar cuando usted para de empujar a los pedales.
• Los pedales al girar pueden causar heridas.
• Reduzca la velocidad de los pedales en forma controlada.
• El peso del usuario no debe exceder 113 kg.
• Reemplace la calcomanía si está dañada, ilegible, o faltando.

WESLO is a registered trademark of ICON IP, Inc.

IMPORTANT PRECAUTIONS

⚠ WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on your exercise bike before using your exercise bike. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

1. **It is the responsibility of the owner to ensure that all users of the exercise bike are adequately informed of all precautions.**
2. **Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.**
3. **Use the exercise bike only as described in this manual.**
4. **The exercise bike is intended for home use only. Do not use the exercise bike in a commercial, rental, or institutional setting.**
5. **Keep the exercise bike indoors, away from moisture and dust. Do not put the exercise bike in a garage or covered patio, or near water.**
6. **Place the exercise bike on a level surface, with a mat beneath it to protect the floor or carpet. Make sure that there is at least 2 ft. (0.6 m) of clearance around the exercise bike.**
7. **Inspect and properly tighten all parts regularly. Replace any worn parts immediately.**
8. **Keep children under age 12 and pets away from the exercise bike at all times.**
9. **Wear appropriate clothes while exercising; do not wear loose clothes that could become caught on the exercise bike. Always wear athletic shoes for foot protection.**
10. **The exercise bike should not be used by persons weighing more than 250 lbs. (113 kg).**
11. **Be careful when mounting and dismounting the exercise bike.**
12. **Always keep your back straight while using the exercise bike; do not arch your back.**
13. **The heart rate monitor is not a medical device. Various factors may affect the accuracy of heart rate readings. The heart rate monitor is intended only as an exercise aid in determining heart rate trends in general.**
14. **The exercise bike does not have a freewheel; the pedals will continue to move until the flywheel stops. Reduce your pedaling speed in a controlled way.**
15. **Over exercising may result in serious injury or death. If you feel faint or if you experience pain while exercising, stop immediately and cool down.**

BEFORE YOU BEGIN

Thank you for selecting the new WESLO® PURSUIT R 3.2 exercise bike. Cycling is an effective exercise for increasing cardiovascular fitness, building endurance, and toning the body. The PURSUIT R 3.2 exercise bike provides a selection of features designed to make your workouts at home more effective and enjoyable.

For your benefit, read this manual carefully before you use the exercise bike. If you have questions after reading this manual, please see the front cover of this manual. To help us assist you, note the product model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.

Before reading further, please review the drawing below and familiarize yourself with the labeled parts.

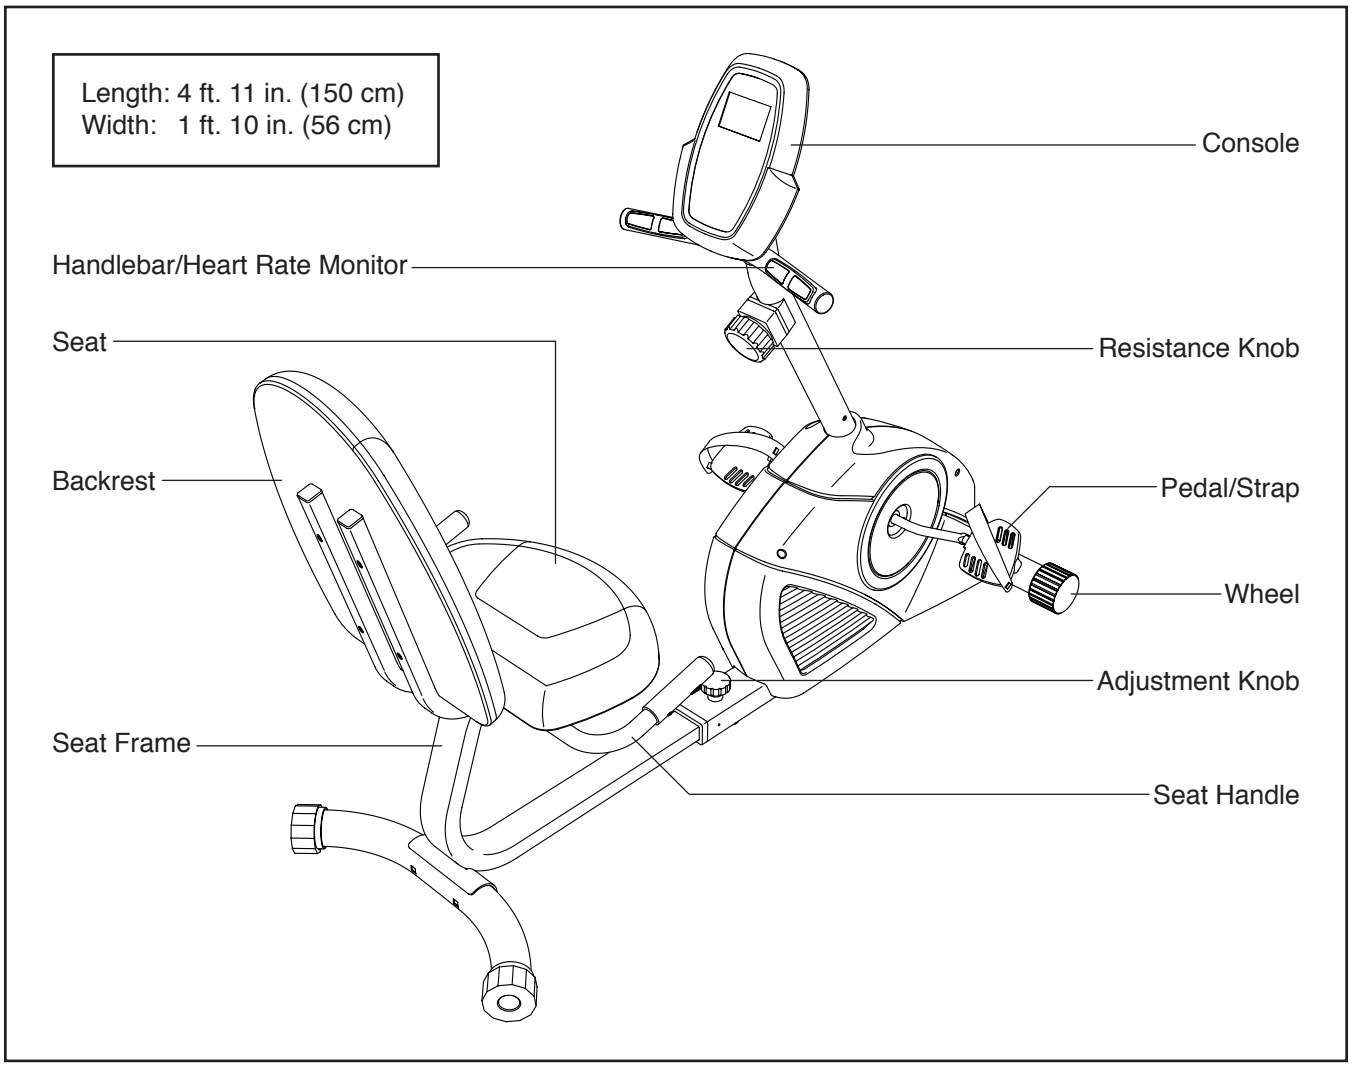

PART IDENTIFICATION CHART

Use the drawings below to identify the small parts needed for assembly. The number in parentheses below each drawing is the key number of the part, from the PART LIST near the end of this manual. The number following the key number is the quantity needed for assembly. **Note: If a part is not in the hardware kit, check to see if it has been preassembled. Extra parts may be included.**

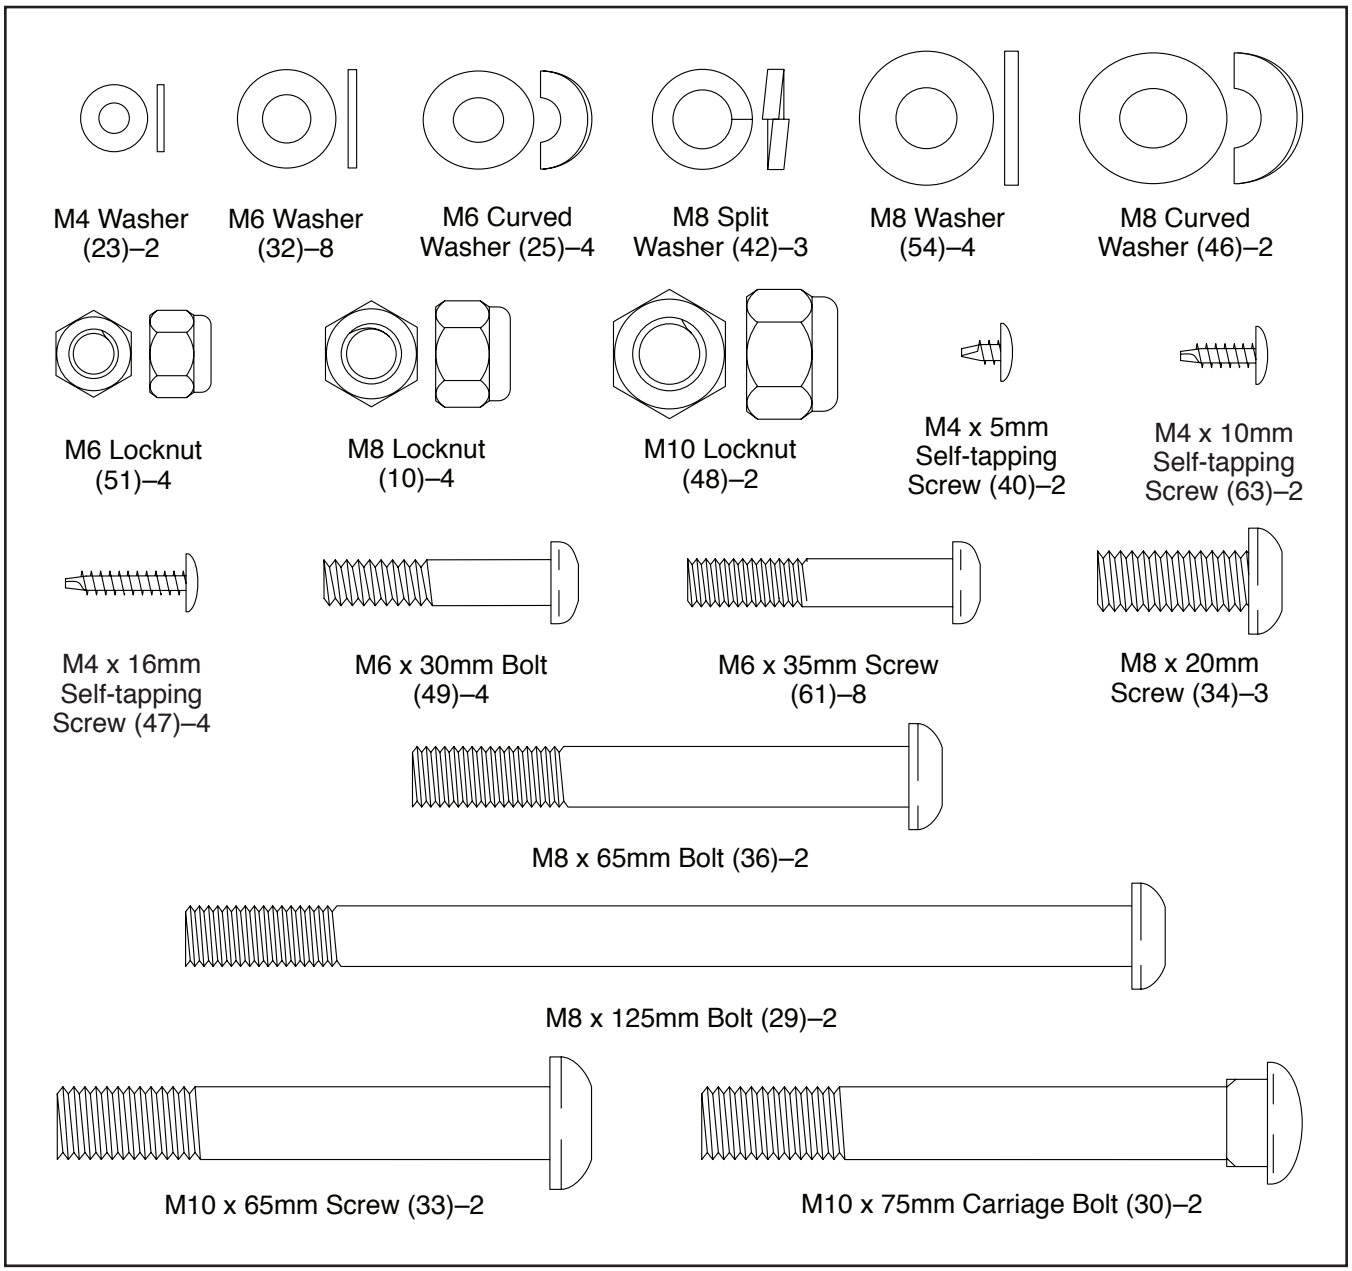
M4 Washer (23)–2
M6 Washer (32)–8
M6 Curved Washer (25)–4
M8 Split Washer (42)–3
M8 Washer (54)–4
M8 Curved Washer (46)–2
M6 Locknut (51)–4
M8 Locknut (10)–4
M10 Locknut (48)–2
M4 x 5mm Self-tapping Screw (40)–2
M4 x 10mm Self-tapping Screw (63)–2
M4 x 16mm Self-tapping Screw (47)–4
M6 x 30mm Bolt (49)–4
M6 x 35mm Screw (61)–8
M8 x 20mm Screw (34)–3
M8 x 65mm Bolt (36)–2
M8 x 125mm Bolt (29)–2
M10 x 65mm Screw (33)–2
M10 x 75mm Carriage Bolt (30)–2

ASSEMBLY

- To hire an authorized service technician to assemble this product, call 1-800-445-2480.
- Assembly requires two persons.
- Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until you finish all assembly steps.
- To identify small parts, see page 5.
- Left parts are marked “L” or “Left” and right parts are marked “R” or “Right.”

- In addition to the included tool(s), assembly requires the following tools:

one Phillips screwdriver 

one adjustable wrench

one pair of pliers

one rubber mallet

Assembly may be easier if you have a set of wrenches. To avoid damaging parts, do not use power tools.

1. Orient the Front Stabilizer (2) so that the large holes are facing the Frame (1).

   Attach the Front Stabilizer (2) to the Frame (1) with two M10 x 65mm Screws (33).

1

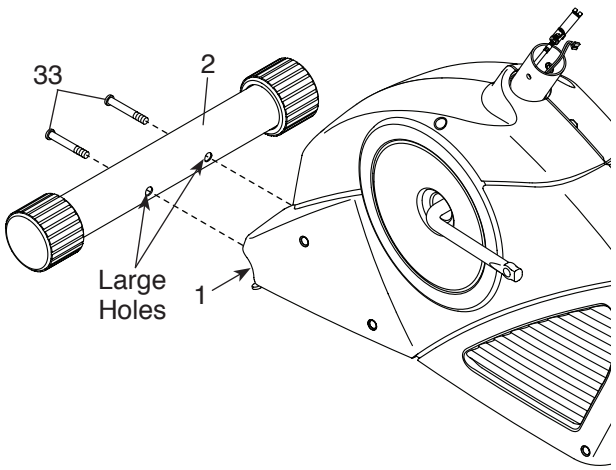

2. Attach the Rear Stabilizer (6) to the Seat Frame (5) with two M10 x 75mm Carriage Bolts (30) and two M10 Locknuts (48).

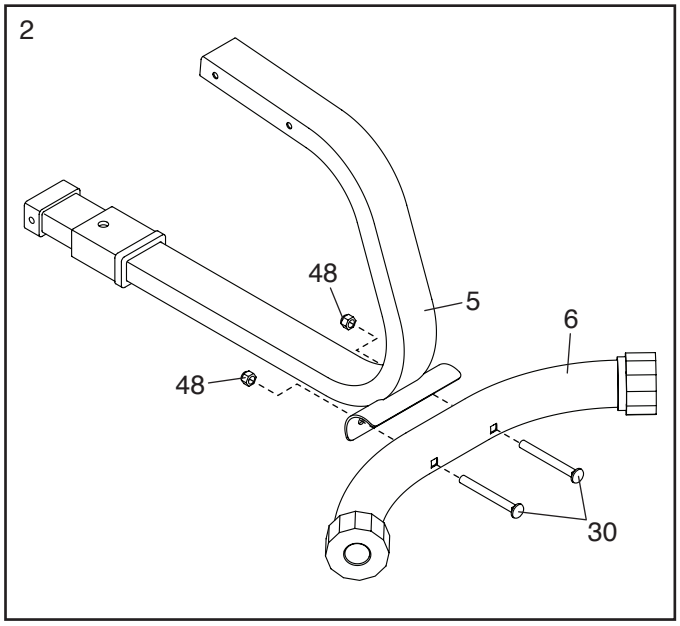

3. Insert the end of the Seat Frame (5) into the Frame (1).

   Firmly press the Frame Bushing (56) into the Frame (1).

   Attach the Frame Bushing (56) to the Frame (1) with two M4 x 5mm Self-tapping Screws (40).

   Tighten the Adjustment Knob (9) into the Frame (1).

   Carefully tip the exercise bike onto its side. Attach the two Bumpers (57) to the Frame (1) with two M4 x 10mm Self-tapping Screws (63) and two M4 Washers (23).

   Tip the exercise bike upright.

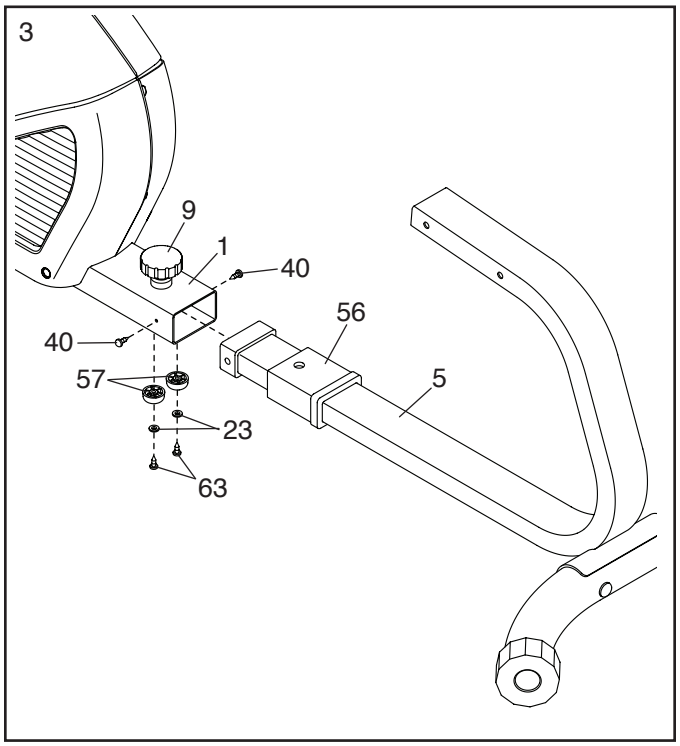

4. Attach the Left and Right Seat Brackets (14, 15) to the Seat Frame (5) with two M8 x 125mm Bolts (29), four M8 Washers (54), and two M8 Locknuts (10) as shown. **Do not fully tighten the Locknuts yet.**

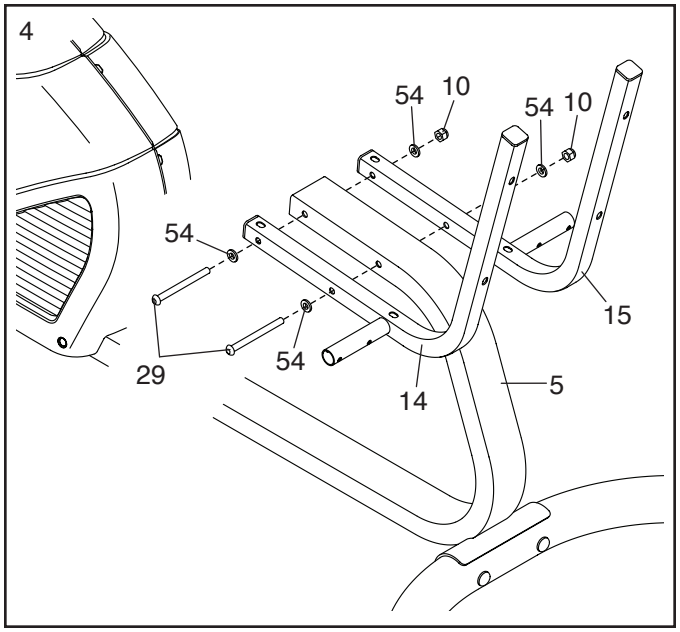

5. Attach a Seat Handle (59) to the round tube on the Left Seat Bracket (14) with two M6 x 30mm Bolts (49), two M6 Curved Washers (25), and two M6 Locknuts (51). **Make sure that the Locknuts are in the hexagonal holes.**

   Attach the other Seat Handle (59) to the Right Seat Bracket (15) in the same way.

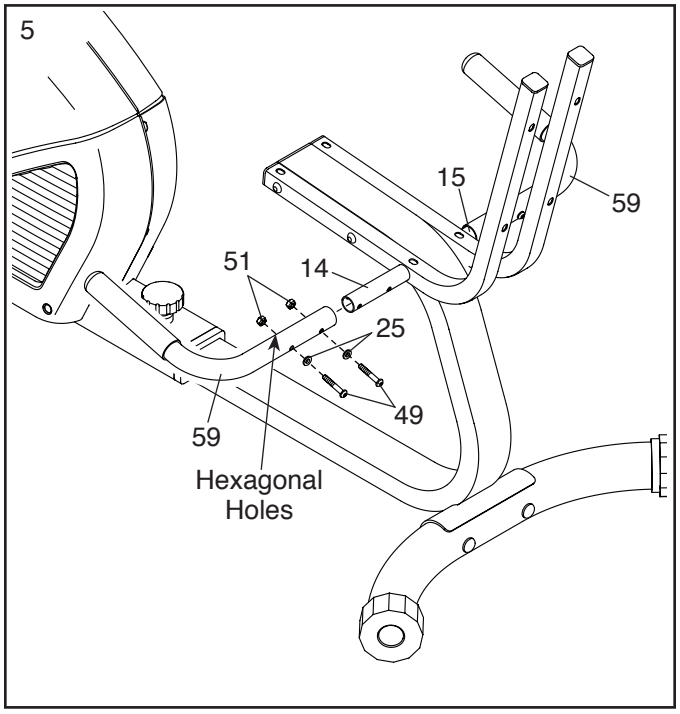

6. Attach the Backrest (60) to the Seat Brackets (14, 15) with four M6 x 35mm Screws (61) and four M6 Washers (32).

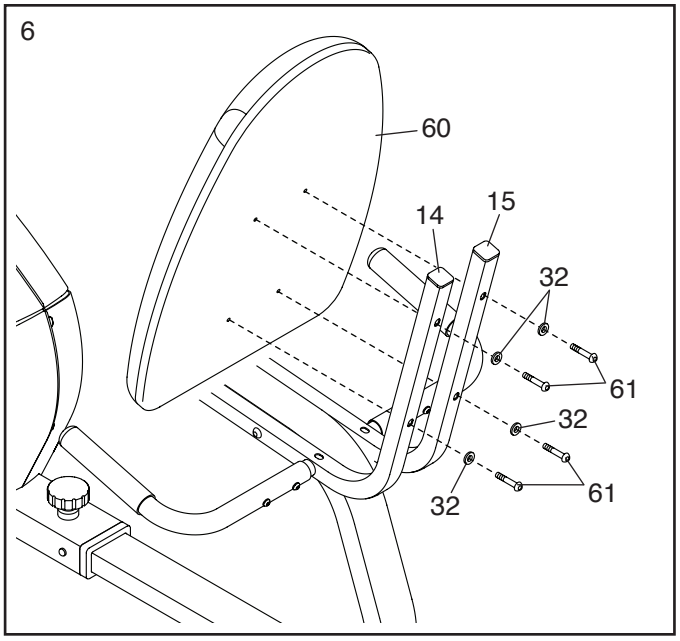

7. Attach the Seat (12) to the Seat Brackets (14, 15) with four M6 x 35mm Screws (61) and four M6 Washers (32).

   See step 4. Tighten the two M8 Locknuts (10).

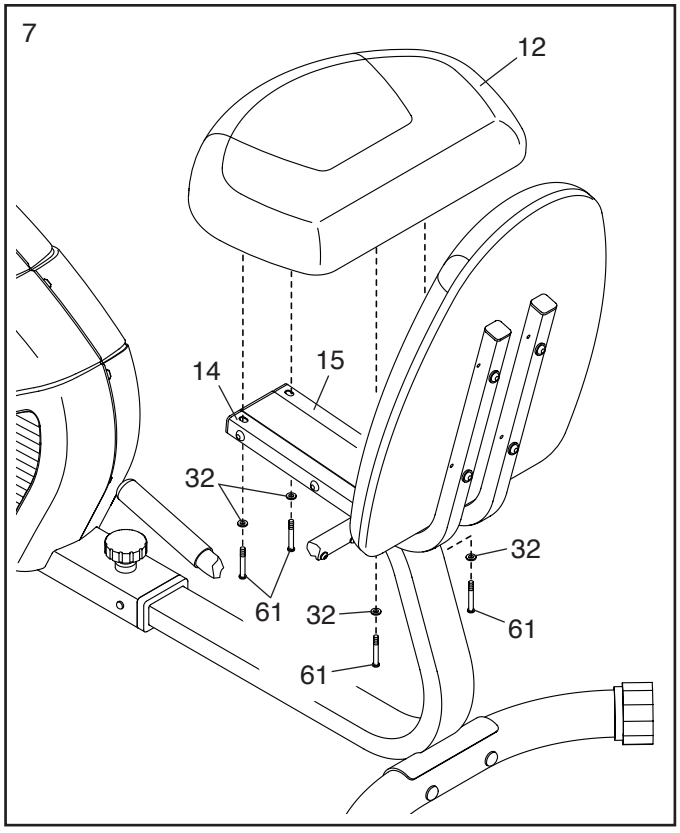

8. Have a second person hold the Upright (13) near the Frame (1) until step 9.

   Connect the Extension Wire (52) to the Reed Wire (43).

   Then, connect the Resistance Cable (19) to the Lower Resistance Cable (45) in the following way:

   - **See drawing A.** Pull upward on the metal bracket on the Lower Resistance Cable (45), and insert the tip of the Resistance Cable (19) into the wire clip inside the metal bracket.
   - **See drawing B.** Firmly pull the Resistance Cable (19) upward and slide it into the top of the metal bracket.
   - **See drawing C.** Using pliers, squeeze the prongs on the upper end of the metal bracket together.

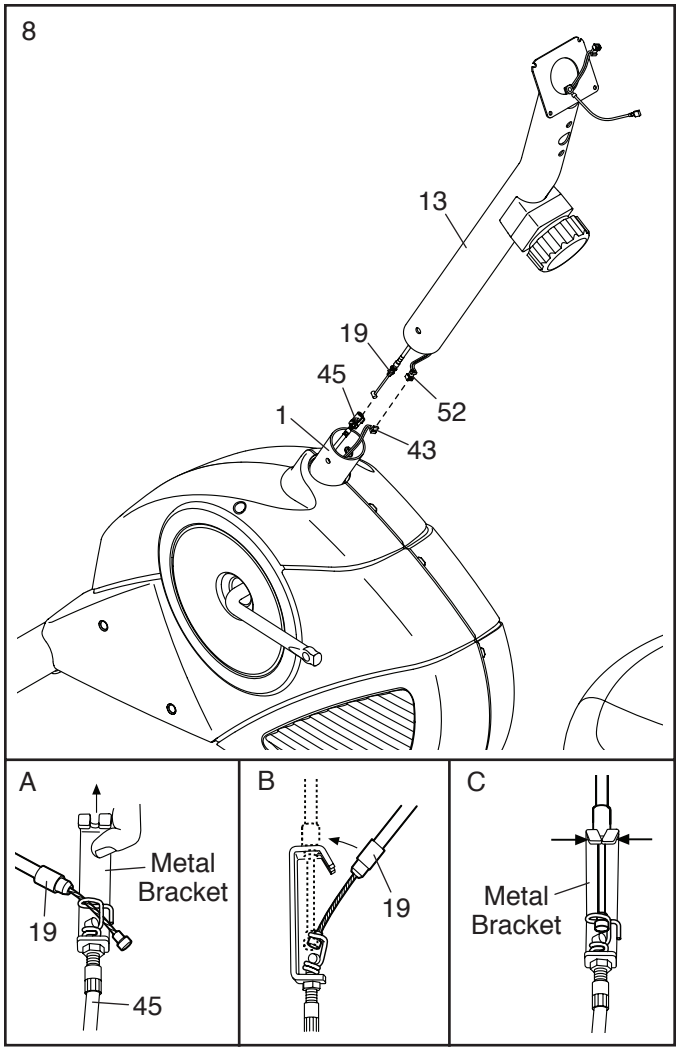

9. Insert the excess wire and cable into the Frame (1).

   Tip: Avoid pinching the wires. Slide the Upright (13) onto the Frame (1).

   Attach the Upright (13) with three M8 x 20mm Screws (34) and three M8 Split Washers (42).

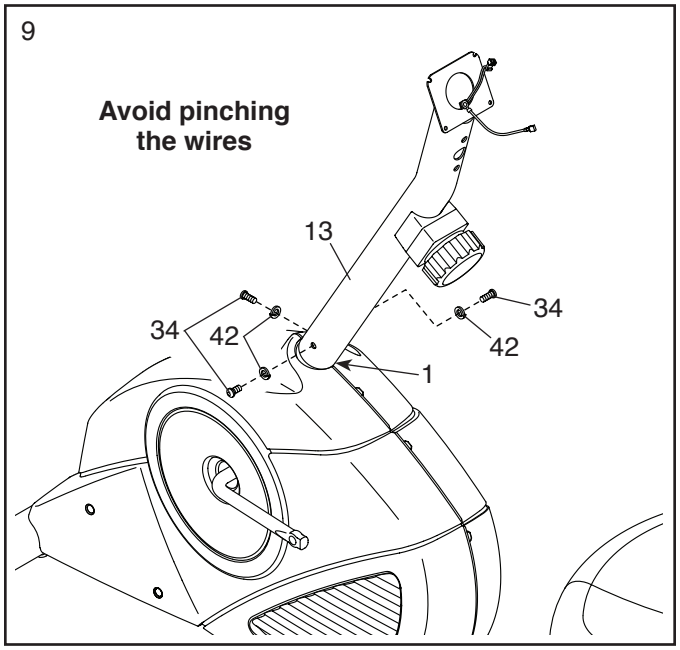

10. Orient the Handlebar (53) so that the Contacts (68) point upward.

    Hold the Handlebar (53) near the Upright (13). Insert the two Pulse Wires (67) into the Upright, and then pull the Pulse Wires out of the top of the Upright.

    Tip: Avoid pinching the wires. Attach the Handlebar (53) to the Upright (13) with two M8 x 65mm Bolts (36), two M8 Curved Washers (46), and two M8 Locknuts (10).

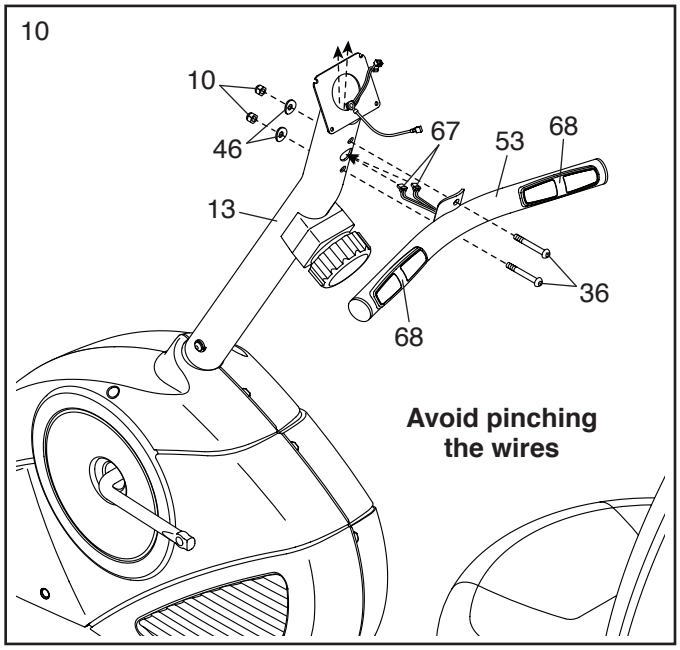

11. The Console (16) can use four AA batteries (not included); alkaline batteries are recommended. Do not use old and new batteries together or alkaline, standard, and rechargeable batteries together. **IMPORTANT: If the Console has been exposed to cold temperatures, allow it to warm to room temperature before inserting batteries. Otherwise, you may damage the console displays or other electronic components.**

    Remove the battery cover from the back of the Console (16), and insert batteries into the battery compartment. **Make sure to orient the batteries as shown by the diagram inside the battery compartment.** Then, reattach the battery cover.

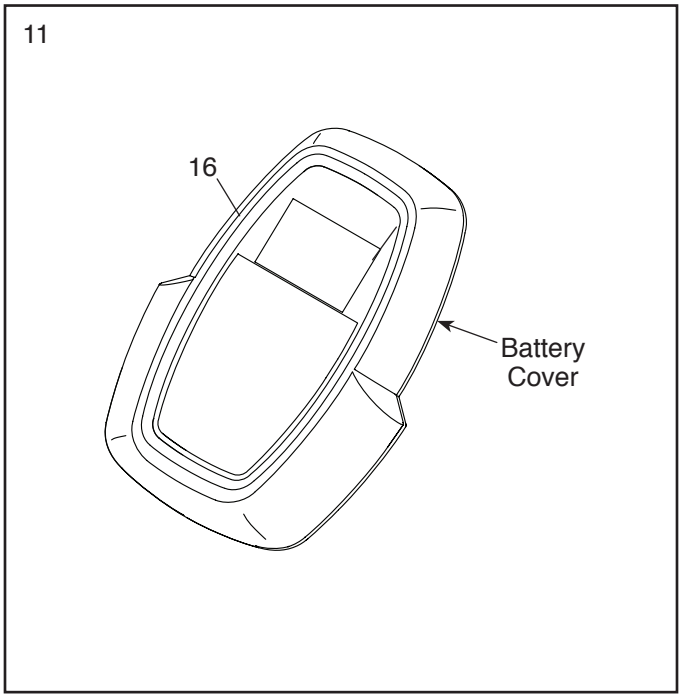

12. While a second person holds the Console (16) near the Upright (13), connect the console wires to the two Pulse Wires (67), the Extension Wire (52), and the Ground Wire (65).

    Then, insert the wires into the Upright (13).

    Tip: Avoid pinching the wires. Attach the Console (16) to the Upright (13) with four M4 x 16mm Self-tapping Screws (47).

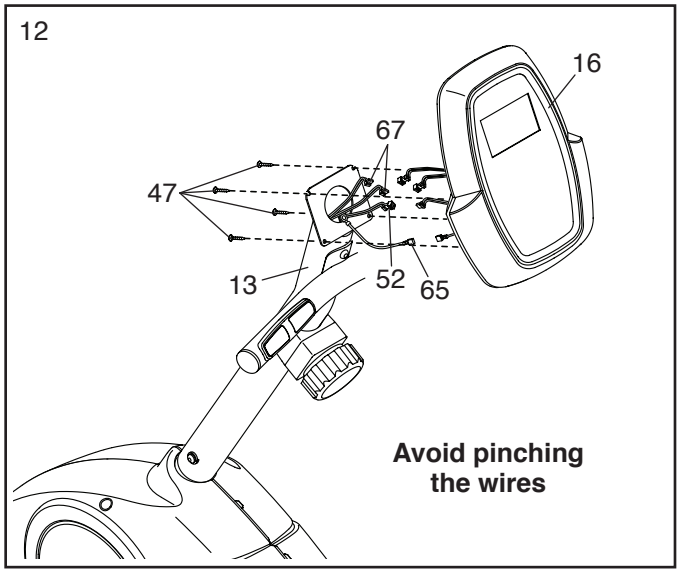

13. Identify the Left Pedal (24).

    Using an adjustable wrench, **firmly tighten** the Left Pedal (24) **counterclockwise** into the left arm of the Crank (21).

    Tighten the Right Pedal (not shown) **clockwise** into the right arm of the Crank (not shown).

    Adjust the strap on the Left Pedal (24) to the desired position, and press the end of the strap onto the tab on the Left Pedal. **Adjust the strap on the Right Pedal (not shown) in the same way.**

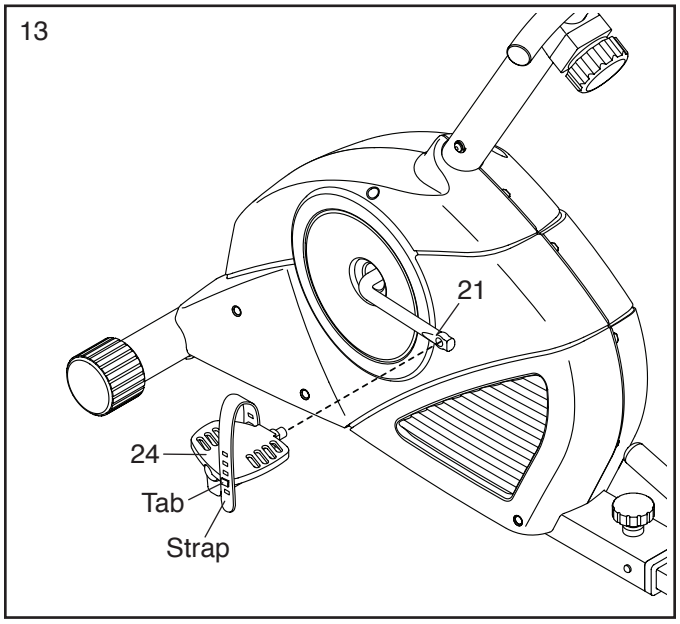

14. **Make sure that all parts are properly tightened before you use the exercise bike. After the exercise bike is assembled, inspect it to make sure that it is assembled correctly and that it functions properly.** Extra parts may be included. Place a mat under the exercise bike to protect the floor.

HOW TO USE THE EXERCISE BIKE

HOW TO ADJUST THE SEAT FRAME

For effective exercise, the seat should be in the proper position. As you pedal, there should be a slight bend in your knees when the pedals are in the most forward position.

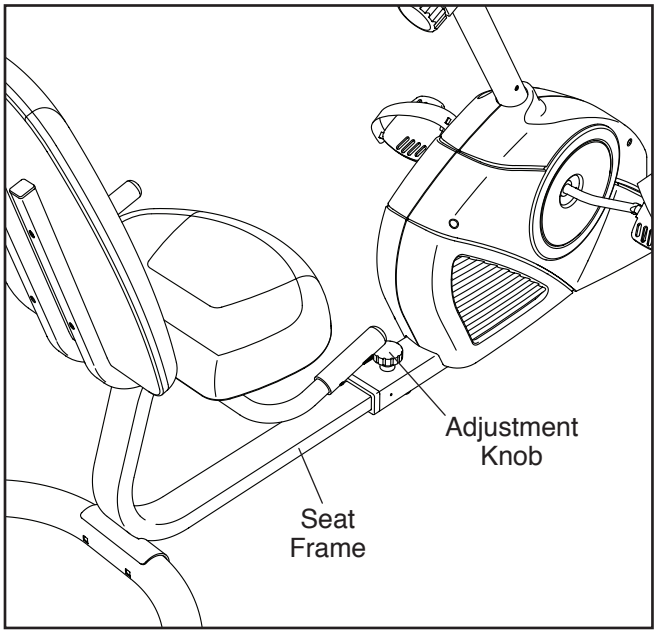

To adjust the seat frame, first loosen the adjustment knob on the frame. Slide the seat frame forward or backward to the desired position. Then, retighten the adjustment knob.

HOW TO ADJUST THE PEDALING RESISTANCE

To increase the resistance of the pedals, turn the resistance knob clockwise; to decrease the resistance, turn the knob counterclockwise.

IMPORTANT: Stop turning the knob when turning becomes difficult, or damage may result.

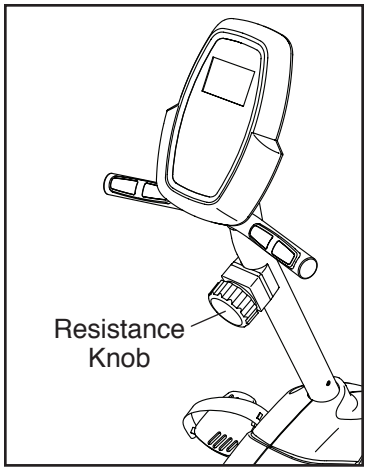

CONSOLE DIAGRAM

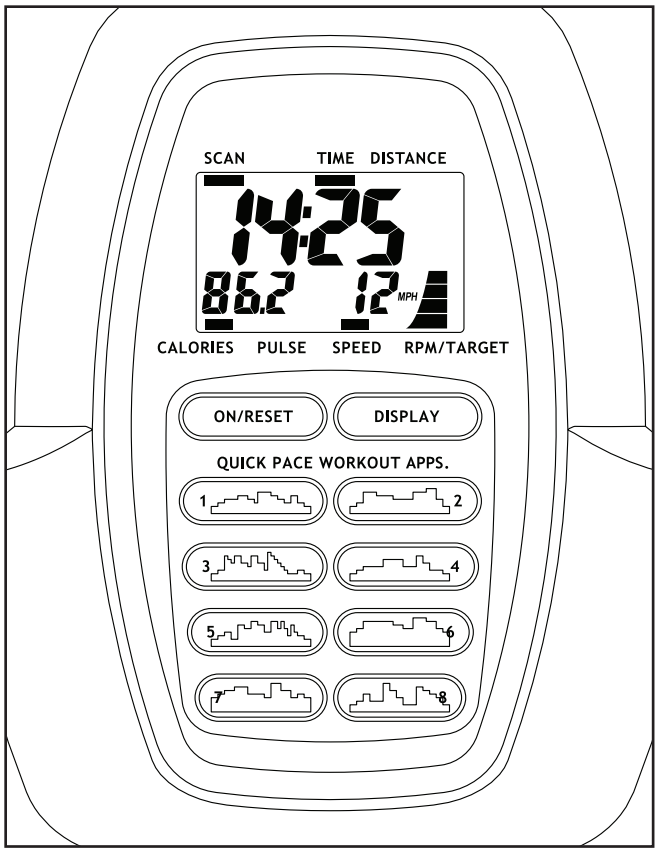

FEATURES OF THE CONSOLE

The console offers a selection of features designed to make your workouts more effective.

When you use the manual mode of the console, the console will provide continuous exercise feedback. You can even measure your heart rate using the handgrip heart rate monitor.

The console also offers eight quick pace workouts that prompt you to vary your pedaling pace while guiding you through an effective workout.

Before using the console, make sure that batteries are installed (see assembly step 11 on page 11). If there is a sheet of plastic on the display, remove the plastic.

To use the manual mode, see the instructions at the right. **To use a quick pace workout,** see page 16. **To use the user mode,** see page 17.

HOW TO USE THE MANUAL MODE

1. **Turn on the console.**

   To turn on the console, press the On/Reset button or begin pedaling. The entire display will turn on for a moment; the console will then be ready for use.

2. **Select the manual mode.**

   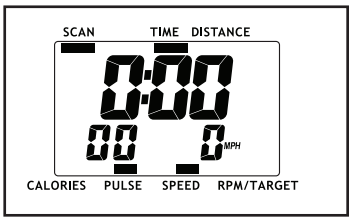

   When you turn on the console, the manual mode will be selected. If you have selected a workout, reselect the manual mode by pressing any of the Quick Pace Workout Apps buttons repeatedly until zeros appear in the display.

3. **Follow your progress with the display.**

   The console has several displays that show the following workout information:

   Speed—This display shows your pedaling speed in miles or kilometers per hour.

   Time—This display shows the elapsed time. Note: When a workout is selected, the display shows the time remaining in the workout instead of the elapsed time.

   Distance—This display shows the distance you have pedaled in miles or kilometers.

   Calories—This display shows the approximate number of calories you have burned.

   Pulse—This display shows your heart rate when you use the handgrip heart rate monitor.

   Scan—When you select this display option, the upper section of the display will show both time and distance information, and the lower left section of the display will show calories information.

Note: The console can show pedaling speed and distance in either miles or kilometers. To change the unit of measurement, see THE USER MODE on page 17.

When you turn on the console, the scan display will be selected automatically. An indicator will appear below the word SCAN to show that the scan display is selected.

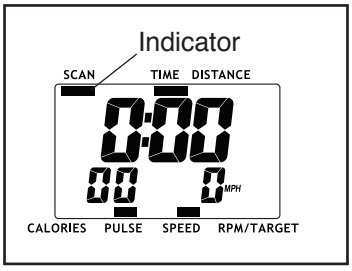

As you exercise, the upper section of the display will alternately show the elapsed time and the distance that you have pedaled; the lower left section of the display will show the number of calories you have burned. The lower right section of the display will show your pedaling speed.

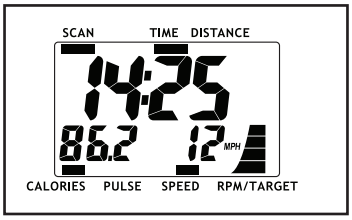

In addition, the RPM meter on the right side of the display will provide a visual representation of your pedaling speed. As you increase or decrease your pace, bars will appear or disappear in the RPM meter.

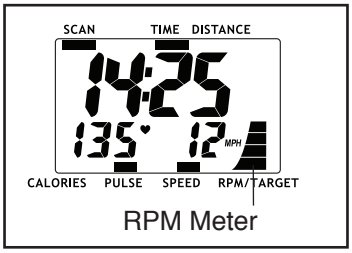

To cancel the scan mode, press the Display button. The indicator below the word SCAN will disappear. The upper section of the display will then show only the elapsed time. If you press the Display button again, the upper section of the display will show only the distance pedaled. To select the scan mode again, press the Display button repeatedly until an indicator appears below the word SCAN.

To reset the display, press the On/Reset button. To pause the console, stop pedaling. When the console is paused, the time will flash in the display. To continue your workout, simply resume pedaling.

4. **Measure your heart rate if desired.**

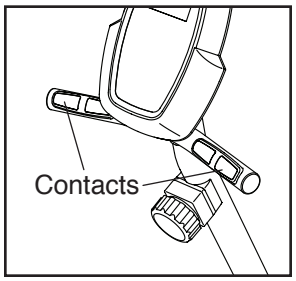

Note: If there are sheets of plastic on the metal contacts of the handgrip heart rate monitor, remove the plastic. To measure your heart rate, hold the handgrip heart rate monitor, with your palms resting against the contacts. **Avoid moving your hands or gripping the contacts tightly.**

When your pulse is detected, the heart-shaped indicator in the display will flash each time your heart beats and two dashes will appear. After a moment, your heart rate will be shown in the display.

For the most accurate heart rate reading, continue to hold the contacts for about 15 seconds. Note: If you continue to hold the handgrip heart rate monitor, the display will show your heart rate for up to 30 seconds. The display will then show your heart rate along with the other modes.

If your heart rate is not shown, make sure that your hands are positioned as described. Be careful not to move your hand excessively or to squeeze the contacts tightly. For optimal performance, clean the contacts using a soft cloth; **never use alcohol, abrasives, or chemicals to clean the contacts.**

5. **When you are finished exercising, the console will turn off automatically.**

If the pedals do not move for a few seconds, the time will flash in the display and the console will pause.

If the pedals do not move for a few minutes, the console will turn off and the display will be reset.

HOW TO USE A QUICK PACE WORKOUT

1. **Turn on the console.**

   To turn on the console, press the On/Reset button or begin pedaling. The entire display will turn on for a moment; the console will then be ready for use.

2. **Select a quick pace workout.**

   To select a quick pace workout, press the desired Quick Pace Workouts Apps button. The name of the workout will appear in the display.

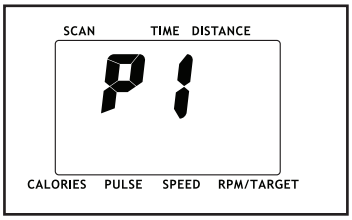

   A few seconds after you select a quick pace workout, the display will show the duration of the workout.

3. **Begin pedaling to start the workout.**

   The quick pace workouts consist of several one-minute segments. One target speed (rpm) is programmed for each segment.

   The target speed settings for the workout will be shown by the target meter in the display. The RPM meter will show your actual pedaling speed.

   As the target meter changes in height during the workout, adjust your pedaling speed so that the same number of bars appears in both meters.

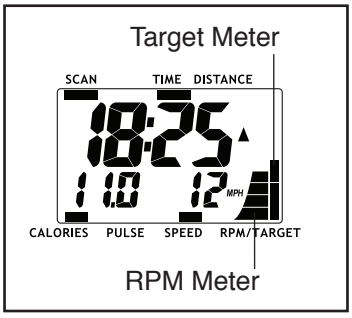

   If your pedaling speed is slower than the current target speed, an arrow will appear next to the RPM meter to prompt you to increase your speed; **if your pedaling speed is faster than the target speed,** an arrow will prompt you to decrease your speed.

   IMPORTANT: The target speed settings for the workout are intended only to provide a goal. Your actual pedaling speed may be slower than the target speed settings, especially during the first few months of your exercise workout. Make sure to pedal at speed that is comfortable for you.

   The display will show the time remaining in the workout. If you stop pedaling for a few seconds, the workout will pause and the time will flash in the display. To resume the workout, simply resume pedaling.

4. **Follow your progress with the display.**

   See step 3 on page 14.

5. **Measure your heart rate if desired.**

   See step 4 on page 15.

6. **When you are finished exercising, the console will turn off automatically.**

   See step 5 on page 15.

THE USER MODE

The console features a user mode that allows you to select a unit of measurement for the console.

To select the user mode, press and hold down the Quick Pace Workout App 2 button for a few seconds until the user mode information appears in the display.

The console can show pedaling speed and distance in either miles or kilometers.

The display will show the selected unit of measurement. An E for English miles or an M for metric kilometers will appear in the display. To change the unit of measurement, press the Display button repeatedly.

Note: When you replace the batteries, it may be necessary to reselect the unit of measurement.

To exit the user mode, press the On/Reset button.

MAINTENANCE AND TROUBLESHOOTING

Inspect and tighten all parts of the exercise bike regularly. Replace any worn parts immediately.

To clean the exercise bike, use a damp cloth and a small amount of mild detergent. **IMPORTANT: To avoid damage to the console, keep liquids away from the console and keep the console out of direct sunlight.**

CONSOLE TROUBLESHOOTING

If the console display becomes dim, replace the batteries (see assembly step 11 on page 11); most console problems are the result of low batteries.

If the handgrip heart rate monitor does not function properly, see step 4 on page 15.

HOW TO ADJUST THE REED SWITCH

If the console does not display correct feedback, the reed switch should be adjusted.

To adjust the reed switch, you must first remove the left pedal and the left shield as described below.

Using an adjustable wrench, turn the Left Pedal (24) clockwise and remove it. Next, remove all the Screws (not shown) from the Left and Right Shields (17, 18); **there are two sizes of Screws in the Shields–note which size of Screw you remove from each hole.** Then, gently pull the Left Shield away from the frame.

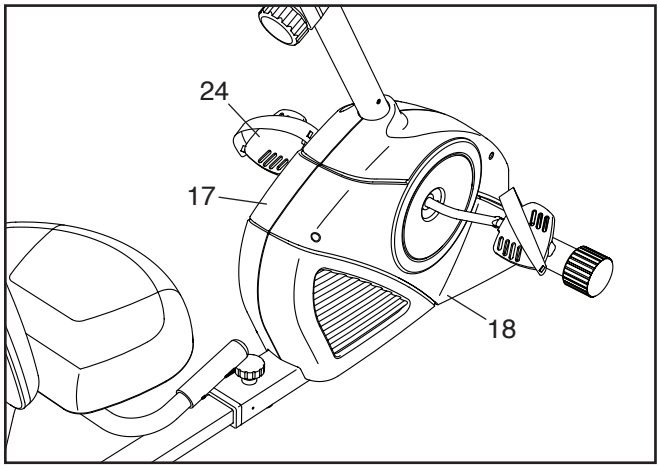

Turn the Resistance Knob (27) to the lowest setting. Then, locate the Reed Switch (43). Turn the Pulley (21) until the Magnet (38) is aligned with the Reed Switch. Loosen, but do not remove, the M4 x 16mm Self-tapping Screw (47).

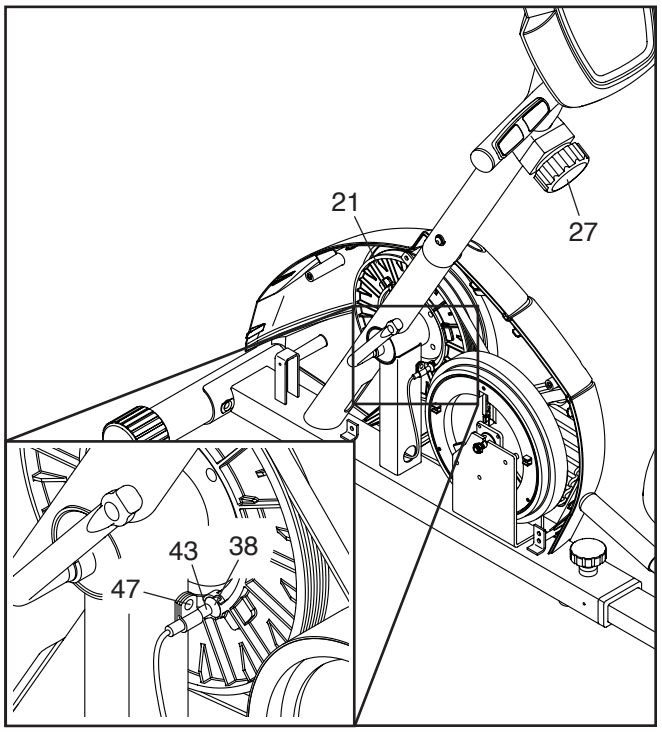

Slide the Reed Switch (43) slightly closer to or away from the Magnet (38), and then retighten the M4 x 16mm Self-tapping Screw (47). Turn the Pulley (21) for a moment.

Repeat these actions until the console displays correct feedback. When the reed switch is correctly adjusted, reattach the left shield and the left pedal.

HOW TO ADJUST THE DRIVE BELT

If you can feel the pedals slip while you are pedaling, even when the resistance is at the highest level, the drive belt may need to be adjusted.

To adjust the drive belt, you must first remove the right pedal and the right shield as described below.

Using an adjustable wrench, turn the right pedal counterclockwise and remove it. Next, remove all of the screws from the left and right shields; **there are two sizes of screws in the shields—note which size of screw you remove from each hole.** Then, gently pull the right shield away from the frame.

Next, loosen the M6 x 20mm Hex Screw (31). Then, tighten the M10 x 50mm Hex Screw (66) until the Drive Belt (35) is tight.

When the Drive Belt (35) is tight, tighten the M6 x 20mm Hex Screw (31).

Then, reattach the right shield and the right pedal.

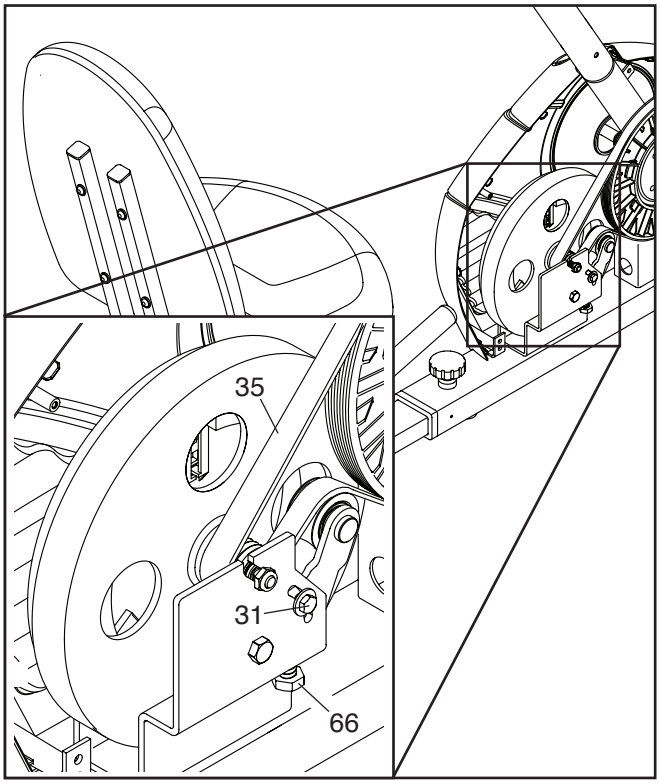

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC CAUTION: To assure continued compliance, use only shielded interface cables when connecting to computer or peripheral devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

EXERCISE GUIDELINES

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.

The heart rate monitor is not a medical device. Various factors may affect the accuracy of heart rate readings. The heart rate monitor is intended only as an exercise aid in determining heart rate trends in general.

These guidelines will help you to plan your exercise program. For detailed exercise information, obtain a reputable book or consult your physician. Remember, proper nutrition and adequate rest are essential for successful results.

EXERCISE INTENSITY

Whether your goal is to burn fat or to strengthen your cardiovascular system, exercising at the proper intensity is the key to achieving results. You can use your heart rate as a guide to find the proper intensity level. The chart below shows recommended heart rates for fat burning and aerobic exercise.

165	*155*	*145*	*140*	*130*	*125*	*115*	♡
145	*138*	*130*	*125*	*118*	*110*	*103*	♡
125	*120*	*115*	*110*	*105*	*95*	*90*	♥
20	*30*	*40*	*50*	*60*	*70*	*80*	

To find the proper intensity level, find your age at the bottom of the chart (ages are rounded off to the nearest ten years). The three numbers listed above your age define your “training zone.” The lowest number is the heart rate for fat burning, the middle number is the heart rate for maximum fat burning, and the highest number is the heart rate for aerobic exercise.

Burning Fat—To burn fat effectively, you must exercise at a low intensity level for a sustained period of time. During the first few minutes of exercise, your body uses carbohydrate calories for energy. Only after the first few minutes of exercise does your body begin to use stored fat calories for energy. If your goal is to burn fat, adjust the intensity of your exercise until your heart rate is near the lowest number in your training zone. For maximum fat burning, exercise with your heart rate near the middle number in your training zone.

Aerobic Exercise—If your goal is to strengthen your cardiovascular system, you must perform aerobic exercise, which is activity that requires large amounts of oxygen for prolonged periods of time. For aerobic exercise, adjust the intensity of your exercise until your heart rate is near the highest number in your training zone.

WORKOUT GUIDELINES

Warming Up—Start with 5 to 10 minutes of stretching and light exercise. A warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.

Training Zone Exercise—Exercise for 20 to 30 minutes with your heart rate in your training zone. (During the first few weeks of your exercise program, do not keep your heart rate in your training zone for longer than 20 minutes.) Breathe regularly and deeply as you exercise; never hold your breath.

Cooling Down—Finish with 5 to 10 minutes of stretching. Stretching increases the flexibility of your muscles and helps to prevent post-exercise problems.

EXERCISE FREQUENCY

To maintain or improve your condition, complete three workouts each week, with at least one day of rest between workouts. After a few months of regular exercise, you may complete up to five workouts each week, if desired. Remember, the key to success is to make exercise a regular and enjoyable part of your everyday life.

PART LIST

Model No. WLEX81512.0 R1213A

Key No.	Qty.	Description
1	1	Frame
2	1	Front Stabilizer
3	2	Handlebar Cap
4	2	Wheel
5	1	Seat Frame
6	1	Rear Stabilizer
7	2	Seat Handle Cap
8	2	Rear Stabilizer Cap
9	1	Adjustment Knob
10	6	M8 Locknut
11	1	Seat Frame Cap
12	1	Seat
13	1	Upright
14	1	Left Seat Bracket
15	1	Right Seat Bracket
16	1	Console
17	1	Left Shield
18	1	Right Shield
19	1	Resistance Control/Cable
20	1	Seat Frame Bushing
21	1	Crank/Pulley
22	1	Clamp
23	2	M4 Washer
24	1	Left Pedal/Strap
25	4	M6 Curved Washer
26	1	Right Pedal/Strap
27	1	Resistance Knob
28	1	Idler Screw
29	2	M8 x 125mm Bolt
30	2	M10 x 75mm Carriage Bolt
31	1	M6 x 20mm Hex Screw
32	9	M6 Washer
33	2	M10 x 65mm Screw
34	3	M8 x 20mm Screw
35	1	Drive Belt
36	2	M8 x 65mm Bolt
37	1	Eddy Mechanism
38	2	Magnet
39	1	M5 Curved Washer
40	2	M4 x 5mm Self-tapping Screw
41	5	M4 x 25mm Screw
42	3	M8 Split Washer
43	1	Reed Switch/Wire
44	1	Crank Bearing Set
45	1	Lower Resistance Cable
46	2	M8 Curved Washer
47	9	M4 x 16mm Self-tapping Screw
48	2	M10 Locknut
49	4	M6 x 30mm Bolt
50	2	Foam Grip
51	4	M6 Locknut
52	1	Extension Wire
53	1	Handlebar
54	4	M8 Washer
55	1	M5 x 40mm Screw
56	1	Frame Bushing
57	2	Bumper
58	4	Square Cap
59	2	Seat Handle
60	1	Backrest
61	8	M6 x 35mm Screw
62	1	Idler
63	2	M4 x 10mm Self-tapping Screw
64	1	M4 x 16mm Ground Screw
65	1	Ground Wire
66	1	M10 x 50mm Hex Screw
67	2	Pulse Wire
68	2	Contact
*	–	User's Manual

Note: Specifications are subject to change without notice. For information about ordering replacement parts, see the back cover of this manual. *These parts are not illustrated.

EXPLODED DRAWING

Model No. WLEX81512.0 R1213A

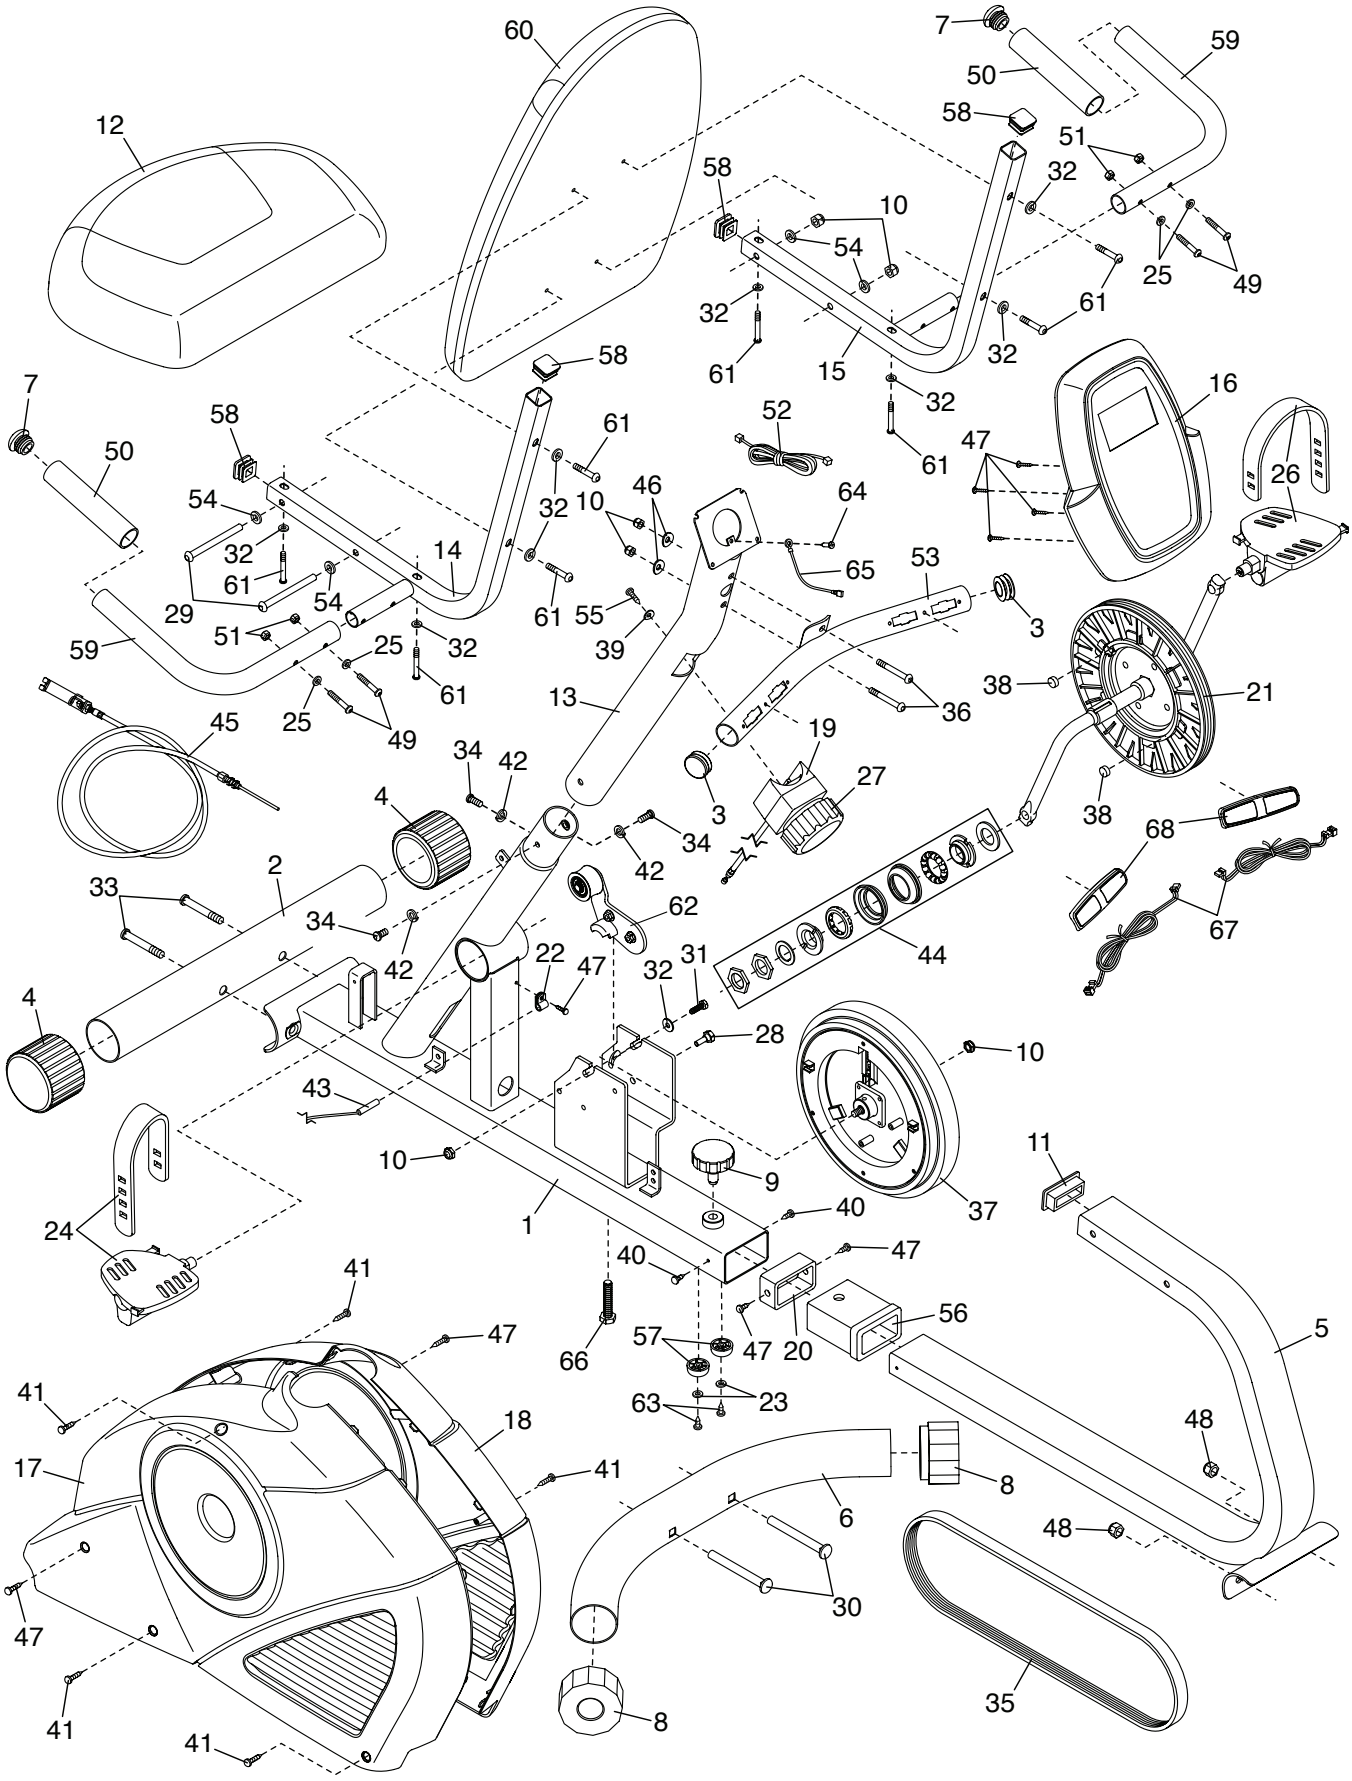

ORDERING REPLACEMENT PARTS

To order replacement parts, please see the front cover of this manual. To help us assist you, be prepared to provide the following information when contacting us:

- the model number and serial number of the product (see the front cover of this manual)
- the name of the product (see the front cover of this manual)
- the key number and description of the replacement part(s) (see the PART LIST and the EXPLODED DRAWING near the end of this manual)

LIMITED WARRANTY

IMPORTANT: You must register this product within 30 days of the purchase date to avoid added fees for service needed under warranty. Go to www.wesloservice.com/registration.

ICON Health & Fitness, Inc. (ICON) warrants this product to be free from defects in workmanship and material, under normal use and service conditions. Parts and labor are warranted for ninety (90) days from the date of purchase.

This warranty extends only to the original purchaser (customer). ICON's obligation under this warranty is limited to repairing or replacing, at ICON's option, the product through one of its authorized service centers. All repairs for which warranty claims are made must be preauthorized by ICON. If the product is shipped to a service center, freight charges to and from the service center will be the customer's responsibility. If replacement parts are shipped while the product is under warranty, the customer will be responsible for a minimal handling charge. For in-home service, the customer will be responsible for a minimal trip charge. This warranty does not extend to freight damage to the product. This warranty will automatically be voided if the product is used as a store display model, if the product is purchased or transported outside the USA, if all instructions in this manual are not followed, if the product is abused or improperly or abnormally used, or if the product is used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product; damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, or costs of removal or installation; or other consequential damages of any kind. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to the customer.

The warranty extended hereunder is in lieu of any and all other warranties, and any implied warranties of merchantability or fitness for a particular purpose are limited in their scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to the customer.

This warranty provides specific legal rights; the customer may have other rights that vary from state to state.

ICON Health & Fitness, Inc., 1500 S. 1000 W., Logan, UT 84321-9813

Part No. 337944 R1213A

Printed in China © 2012 ICON IP, Inc.